



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit

Broom Larder 2120mm Parts Supplied


Parts Supplied

Top




Bottom

A

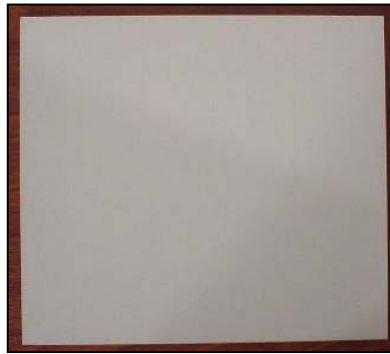


B

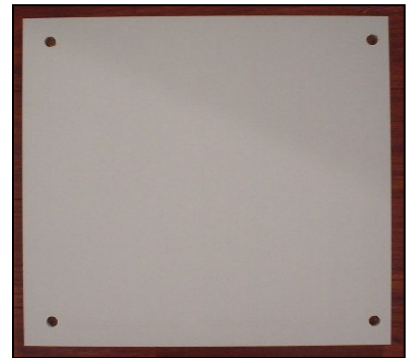

C



D

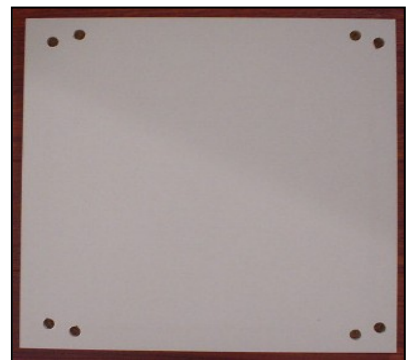

E



F



G



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit
























Part Letter	Part Name	Quantity
A	End Panel* <i>(left hand end shown)</i>	2
B	Optional Shelf	3
C	Fixed Shelf	1
D	Large Back Panel	2
E	Top/Bottom Panel	2
F	Feet Blocks	4
G	Adjustable Feet	4

* *NOTE: End Panels are packed separately from all other parts supplied.*



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit
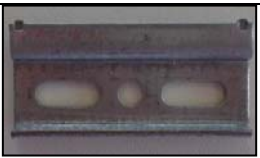
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>J</p> 	<p>K</p> 
<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>P</p> 	<p>Q</p> 
<p>R</p> 	<p>S</p> 	<p>T</p> 	<p>U</p> 	
<p>V</p> 	<p>X</p> 		<p>Y</p> 	
<p>W</p> 				



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit

Fitting Letter	Fitting Name	Quantity
A	Metal Dowel	22
B	Metal Cam	22
C	Wooden Dowel 8 x 40mm	8
D	Wooden Dowel 5 x 25mm	
E	Connecting Screws (M/F)	3 pairs
F	Black Chipboard Screw 8 x 45mm	3
G	Countersunk Screw 8 x 1 ¼"	
H	Countersunk Screw 6 x 5/8"	8
J	Countersunk Screw 6 x ½"	
K	Flange Head Screw 6 x ¾"	
L	Flange Head Screw 6 x 5/8"	
M	Euro Screw 6 x 11mm	
N	Round Head Screw 6 x 5/8"	
P	Shelf Stud	12
Q	Rubber Sleeved Shelf Stud	
R	Angle Bracket	
S	Door Buffer Pad	8
T	5mm Plugs	50
U	35mm Bung	
V	Crown Conceal Cap	
W	Hanging Plate	
X	Plinth Clip	2
Y	Peg-o-Lock	



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit


Assembly Instructions

Step 1. Insert fittings into End Panels

Insert Metal Dowels (fitting A) and Wooden Dowels (fitting C) into the end panel, as shown.

NOTE: End Panels with this pack are **not** Universal; there is a Left End Panel and Right End Panel.

1.1. Insert fittings A and C

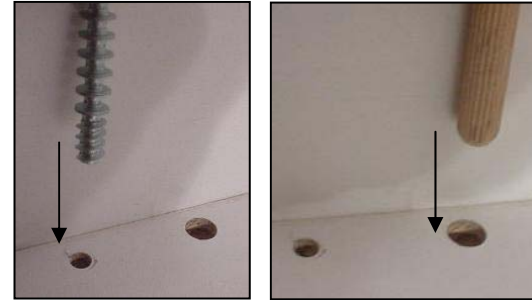

1.2. Positions of fittings A and C on End Panels





CROWN IMPERIAL ASSEMBLY INSTRUCTIONS


Broom Larder 2120mm Unit

Step 2. Top/Bottom Panel and Fixed Shelf
Insert the Circular Cams (fitting B) into the holes in the top panel.


Ensure the arrows on the circular cams, are pointing outwards, towards the pre-drilled edge.

Repeat for the fixed shelf and bottom panel.

2.1. Insert fitting B

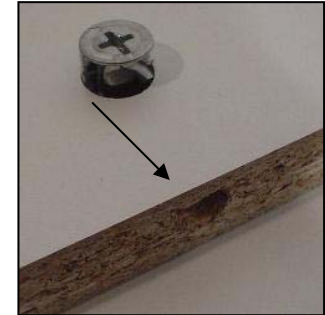

2.2. Position of fitting B in Top/Bottom Panels and Fixed Shelf

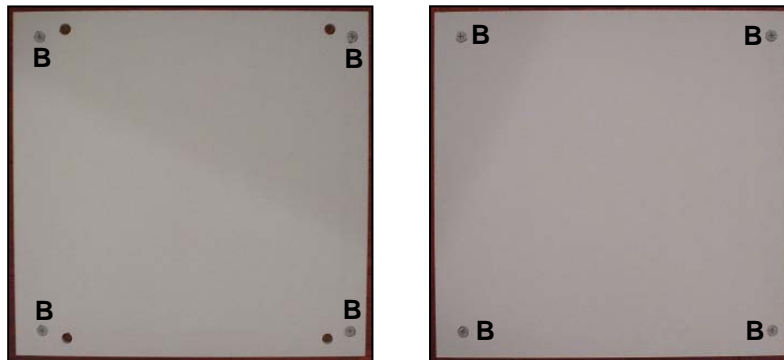

Step 3. Fit Top/Bottom Panels and Fixed Shelf

Step 3.1

Take the top panel and push firmly home onto the end panel, as shown.

Ensure the cams are facing outwards.

3.1. Fit Top Panel to End Panel





CROWN IMPERIAL ASSEMBLY INSTRUCTIONS


Broom Larder 2120mm Unit

Step 3.2

Using a screwdriver, turn the circular cam clockwise to lock.

Repeat for all cams.

3.2. Lock Cams to secure

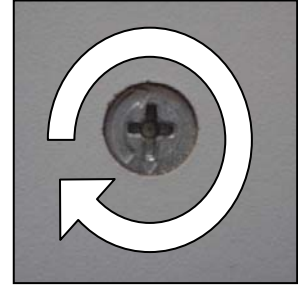

Step 3.3

Repeat the above, to fit the fixed shelf and bottom panel.

Ensure the cams are facing downwards.

3.3 Repeat to attach Bottom Panel



Step 4. Back Panels

For Broom Larder 2120mm units, use the two large backs only.

No modification is required.



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit


Step 5. Back Panel

Insert the Circular Cams (fitting B) into the holes in the back panel.


Ensure the arrows on the circular cams, are pointing outwards, towards the pre-drilled edge.

Repeat for the remaining back panel.

5.1. Insert fitting B

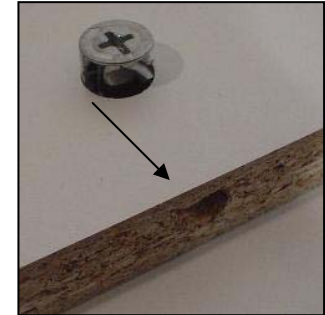

5.2. Position of fitting B in Back Panels

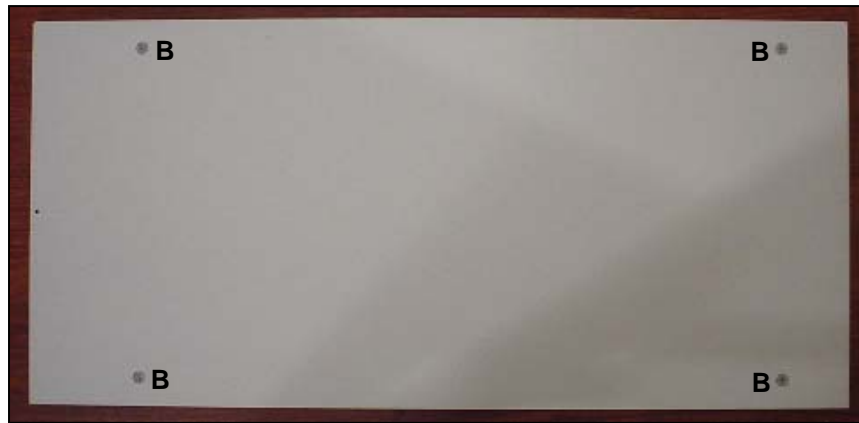


Step 6. Fit Top and Bottom Panels

Step 6.1

Take one large back panel and push firmly home onto the end panel, as shown.

Ensure the cams are facing outwards.

6.1. Fit first Back Panel

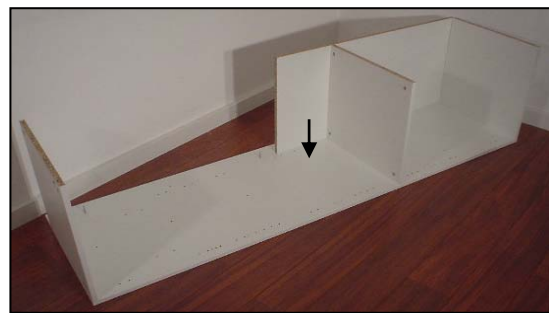



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS


Broom Larder 2120mm Unit

Step 6.2

Using a screwdriver, turn the circular cam clockwise to lock.

Repeat for all cams.

6.2. Lock Cams to secure

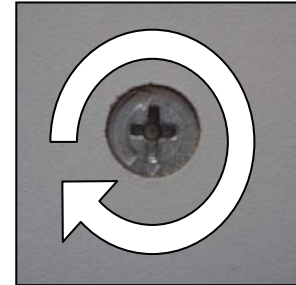

Step 6.3

Repeat, to fit remaining back panel.


6.3. Fit remaining Back Panel



Step 7. Secure both Back Panels

Secure both back panels, using a screw (fitting F), as shown.

7.1. Secure both Back Panels

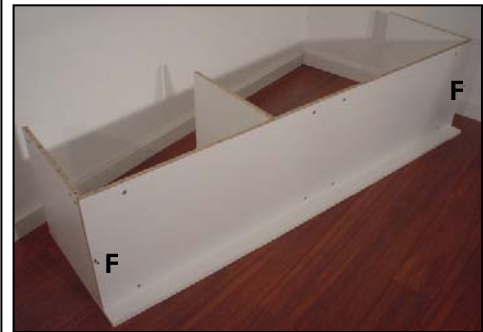

Step 8. End Panel

Place the right hand End Panel over the assembly and push home.

Lock all the remaining Circular Cams with a screwdriver, found on the top, bottom, back panels and the fixed shelf.

8. Fit remaining End Panel




Step 9. Fitting Feet

Step 11.1 Attaching the Feet Blocks

On the bottom panel of the cabinet, locate the feet blocks with the flange facing the edge of the cabinet and push home.

9.1 Fix in Feet Blocks

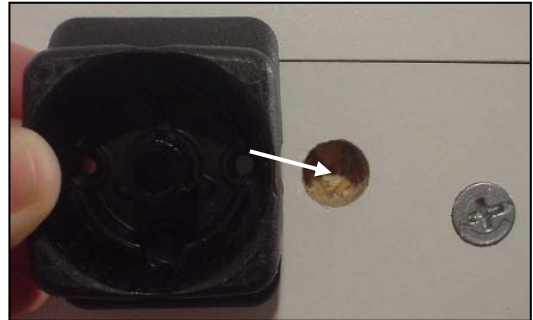

Step 9.2 Securing Feet Blocks

To secure the feet blocks, hit the spigots 'X' with a hammer, as shown, taking care not to damage the surround.

Using two countersunk screws (fitting H), per block, secure further.

9.2 Secure Feet Blocks



Step 9.3 Push Feet into Feet Blocks

Push the adjustable feet, into the feet blocks. Adjust the height of the feet by turning them.

There is a sequence of numbers written on the feet to aid adjusting all feet to the same height.

Repeat for all four feet.

9.3 Fit Feet and Adjust Height





CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Broom Larder 2120mm Unit

Step 10. Shelving

NOTE: Shelving is optional.

When the cabinet is installed, position shelves accordingly. Using four shelf studs (fitting N) position the shelf at the height desired.

Repeat this, if extra shelving is required.

Complete Broom Larder 2120mm Unit

