



# **CROWN IMPERIAL ASSEMBLY INSTRUCTIONS**

## **Glass Dresser Unit**



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*

### Glass Dresser Unit Parts


#### Parts Supplied



A



D



B



E



C



F



G



H



J



L



M



N



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS
























## *Glass Dresser Unit*

<b>Part Letter</b>	<b>Part Name</b>	<b>Quantity</b>
A	End Panel	2
B	Bottom Rail	2
C	Glass Shelf	3
D	Back Panel	2
E	Top/Bottom Panel	1
F	Transformer for Light	1
G	Low Voltage Aluminium Light	1
H	Drawer Base	1
J	Drawer Back	1
K	Drawer Sides	1 pair
L	Drawer Runners	1 pair
M	Metal Adapter	1 pair
N	Drawer Front Fixing Clips	1 pair



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*
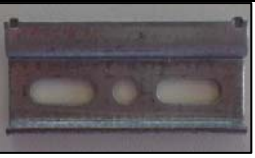
<p><b>A</b></p> 	<p><b>B</b></p> 	<p><b>C</b></p> 	<p><b>D</b></p> 	<p><b>E</b></p> 
<p><b>F</b></p> 	<p><b>G</b></p> 	<p><b>H</b></p> 	<p><b>J</b></p> 	<p><b>K</b></p> 
<p><b>L</b></p> 	<p><b>M</b></p> 	<p><b>N</b></p> 	<p><b>P</b></p> 	<p><b>Q</b></p> 
<p><b>R</b></p> 	<p><b>S</b></p> 	<p><b>T</b></p> 	<p><b>U</b></p> 	
<p><b>V</b></p> 	<p><b>X</b></p> 		<p><b>Y</b></p> 	
<p><b>W</b></p> 				



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*

<b>Fitting Letter</b>	<b>Fitting Name</b>	<b>Quantity</b>
A	Metal Dowel	12
B	Metal Cam	12
C	Wooden Dowel 8 x 40mm	12
D	Wooden Dowel 5 x 25mm	
E	Connecting Screws (M/F)	
F	Black Chipboard Screw 8 x 45mm	
G	Countersunk Screw 8 x 1 ¼"	
H	Countersunk Screw 6 x 5/8"	
J	Countersunk Screw 6 x ½"	8
K	Flange Head Screw 6 x ¾"	
L	Flange Head Screw 6 x 5/8"	
M	Euro Screw 6 x 11mm	4
N	Round Head Screw 6 x 5/8"	
P	Shelf Stud	12
Q	Rubber Sleeved Shelf Stud	
R	Angle Bracket	
S	Door Buffer Pad	5
T	5mm Plugs	26
U	35mm Bung	
V	Crown Conceal Cap	
W	Hanging Plate	
X	Plinth Clip	
Y	Peg-o-Lock	



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*


### Assembly Instructions

#### Step 1. Insert fittings into End Panels


Insert Metal Dowels (fitting A) and Wooden Dowels (fitting C) into the end panel, as shown.

Mirror this for the remaining end panel.

#### 1.1. Insert fittings A and C

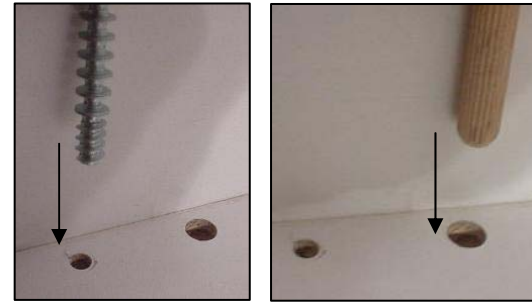

#### 1.2. Positions of fittings A and C on End Panels

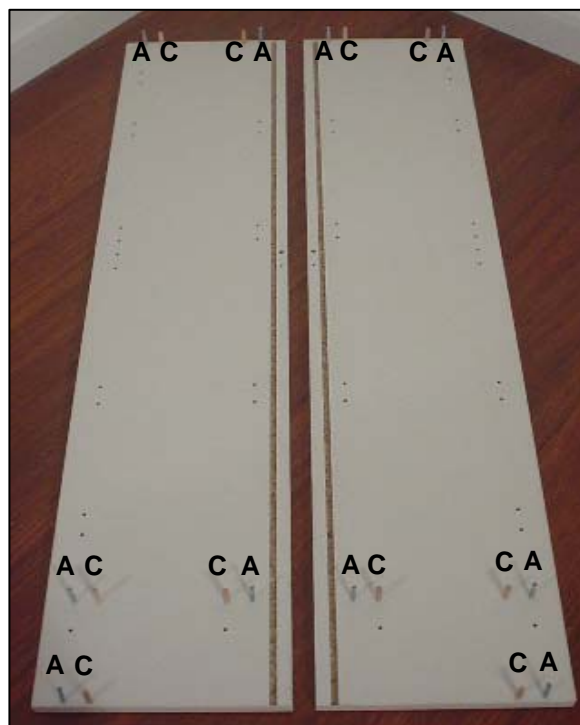



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*


### Step 2. Top/Bottom Panel

Insert the Circular Cams (fitting B) into the holes in the top panel.

Ensure the arrows on the circular cams, are pointing outwards, towards the pre-drilled edge.

Repeat for the bottom panel.

### 2. Insert fitting B

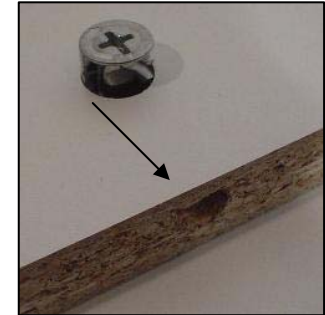

### 2.2. Position of fitting B in Top/Bottom Panel



### Step 3. Fit Top and Bottom Panels

#### Step 3.1

Take the top panel and push firmly home onto the end panel, as shown.

Ensure the cams are facing outwards.

### 3.1. Fit Top Panel to End Panel





# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS


## *Glass Dresser Unit*

### Step 3.2

Using a screwdriver, turn the circular cam clockwise to lock.

Repeat for all cams.

### 3.2. Lock Cams to secure

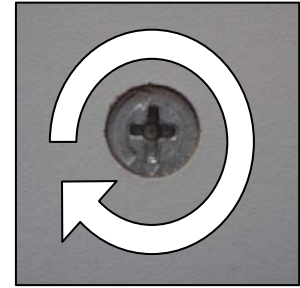

### Step 3.3

Repeat the above, to fit the bottom panel, in position shown.

### 3.3. Repeat to fit Bottom Panel




### Step 4. Fit Back Panel

Take the back panel and slide it between the top and bottom panel, firmly home into the groove of the end panel.

Ensure the face matching the colour of the cabinet, is facing inwards.

### 4.1. Fit Back Panel to End Panel

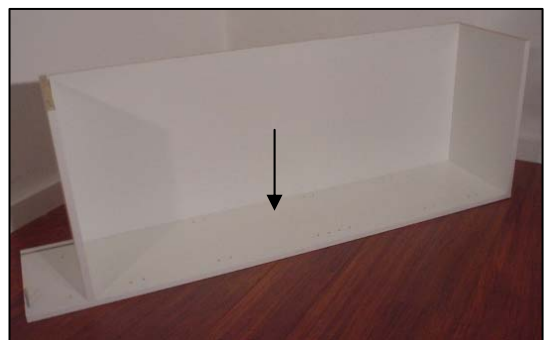



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS


## *Glass Dresser Unit*

### Step 5. Bottom Rail


Insert the Circular Cams (fitting B) into the holes in the bottom rail.

Ensure the arrows on the circular cams, are pointing outwards, towards the pre-drilled edge.

#### 5.1. Insert fitting B

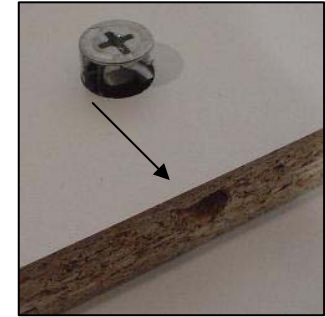

#### 5.2. Fitting B in Bottom Rail



### Step 6. Fit Bottom Rail to End Panel

#### Step 6.1

Take the bottom rail and push firmly home onto the end panel, as shown.

Ensure the cams are facing outwards.

#### 6.1. Fit Bottom Rail to End Panel




#### Step 6.2

Using a screwdriver, turn the circular cam clockwise to lock.

Repeat for all cams.

#### 6.2. Lock Cams to secure

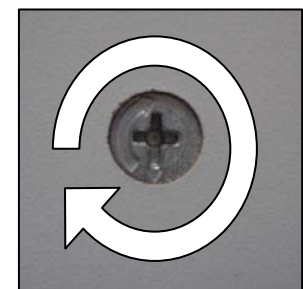



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*

### Step 7. Fit remaining End Panel

Take the remaining End Panel and push it firmly home onto the cabinet.

Using a screwdriver, lock all cams, as before.

### 7. Fit remaining End Panel




### Step 8. Fit the Runners

The image shows the Right Hand Runner. Fix using two screws (fitting K) in the holes shown.

Mirror this to fit the Left Hand Runner.

### 8. Fit Drawer Runners

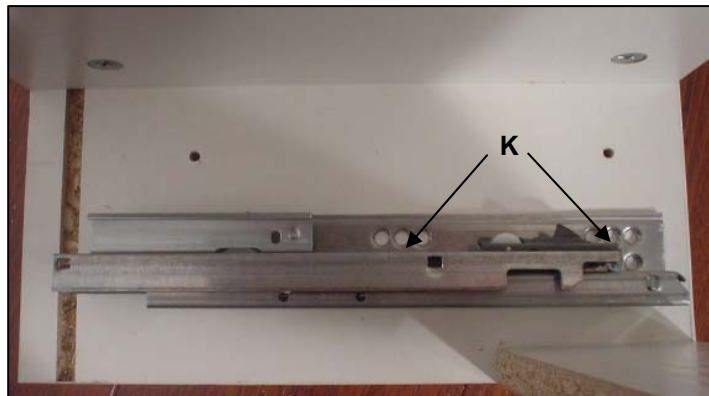



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*

### Step 9. Assemble the Drawer

#### Step 9.1 Fix Sides to Base Panel

##### Step 9.1.1

Take the base panel, and slide it into the groove on one of the metal sides.


##### Step 9.1.2

Fix side to base panel by inserting two screws (fitting H) into the pre-drilled holes.

##### Step 9.1.3

Repeat this to attach the remaining side.

#### 9.1.2. Fix first Side to Base Panel

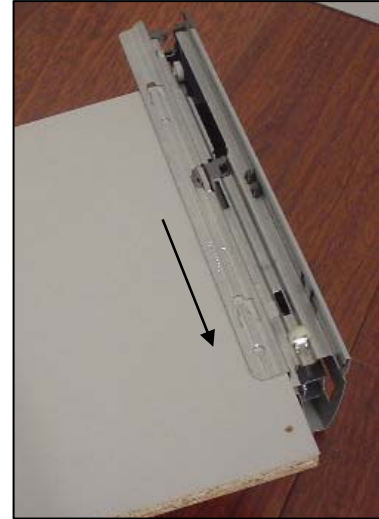

#### 9.1.3. Fix both Sides to the Base Panel





# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*

### Step 9.2. Fit Metal Adapter


#### Step 9.2.1

Take a metal adapter and insert it into the appropriate side, as shown.

#### Step 9.2.2

Repeat to fit the remaining metal adapter.

#### 9.2.1. Fit Metal Adapter

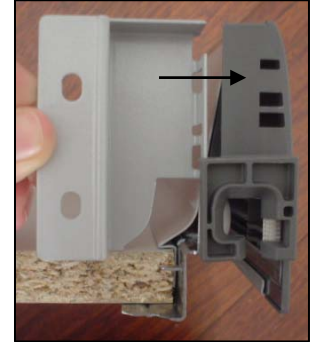

#### 9.2.2. Fit remaining Metal Adapter





# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*

### Step 9.3 Back Panel

#### Step 9.3.1

Slide the Back Panel into the back of the two sides, as shown.

#### 9.3.1. Slide Back Panel into Metal Adapters



#### Step 9.3.2

Secure the back panel using four screws (fitting L) as shown.

#### 9.3.2. Secure Back Panel



### 9. Complete Luxury Drawer Box





## CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

### *Glass Dresser Unit*

#### Step 10. Insert Drawer

When the cabinet is installed, insert the newly assembled drawer into the bottom of the Glass Door/Dresser Unit.

#### Step 11. Shelving

*NOTE: Shelving is optional.*

When the cabinet is installed, position shelves accordingly. Using four shelf studs (fitting N) position the shelf at the height desired.

Repeat this, if extra shelving is required.



# CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

## *Glass Dresser Unit*

### Complete Glass Dresser Unit

